

Original and Exclusive Manufacturer: Shenzhen Yocan Technology Co.,Ltd www.yocan.com Sha'er Industrial Area, Shajing Street, Baoan District, Shenzhen, China.

③ ② ○ ○ △ ○ Made in China

SAFETY WARNING & INSTRUCTIONS

Please read information carefully before using the product and keep it in a safe place:

SAFETY WARNING


- 1. Do not expose the device to extreme temperatures.
- 2. Do not charge your battery through a car.
- 3. Do not over charge or charge unattended.
- 4. Do not use the device while charging.
- 5. Do not disassemble the device or change the battery.

Contact your direct seller or Yocan manufacturer for after-sale support: www.yocan.com

service@yocantech.com

- 1 -

Specification: Size: 20*17*53mm Thread: 510 Battery Capacity: 400mAh Charging: Type-C Housing: PCTG Voltage Range: 1.8-4.2V Capability:> 0.80Ω yocan

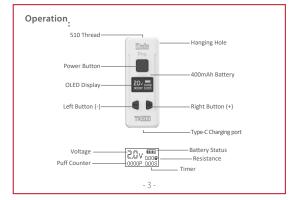

- 1. Turn on/off: Press the power button 5 times quickly.
- 2. Connect your 510 cart to the device, OLED display shows the resistance $\,$
- 3. Preheat: Press the power button 2 times quickly to start preheat (at 1.8V). The OLED display will stay on and countdown 105. To stop preheat manually, press the power button another 2 times quickly.
- 4. Adjustable voltage: 1.8-4.2V. Voltage accurate to 0.1V, Press left (-) and right (+) button to get to desired voltage setting.
- 5. Safety cutoff: When the power button is pressed continuously for more than 15 seconds, the OLED display warns OVER TIME and stops working. Release the power button and then press the power button to continue vaping.
- 6. Puff Counter & Timer:

When the device is on and connected with the cart successfully, every time $\,$

you press the button over 0.5S counts as one. The counter will reset to zero automatically after it reaches 9999. To reset the counter to zero manually, press the power button and the left (-) button at the same time. The timer records the seconds (<15s) at each time of use 7. Battery status display □-<25% □-20%-40% □-40%-60% □-60%-80% □-80%-100% Turn on/off Take Care

Disclaimers:

People under 21 years of age are not permitted to purchase or use this device. Non-smokers, children, and women breast-feeding should not use this product. The device is not a medical device and is not intended to diagnose, cure or prevent any diseases or other conditions. The manufacturers and sellers will not be responsible for any consequential or incidental damage resulting from the sale or use of any merchandise.